





RECIPE 03

Forming Technique

References

-<http://www.materiom.org/recipe/619>

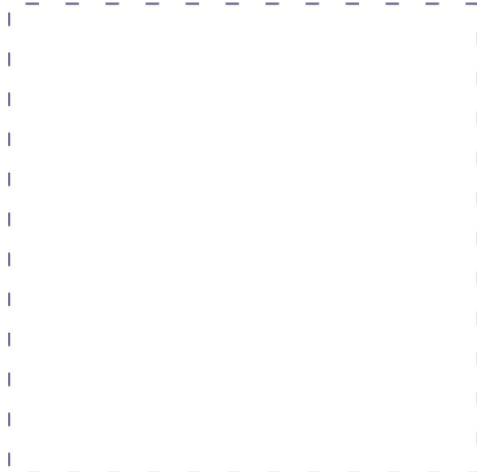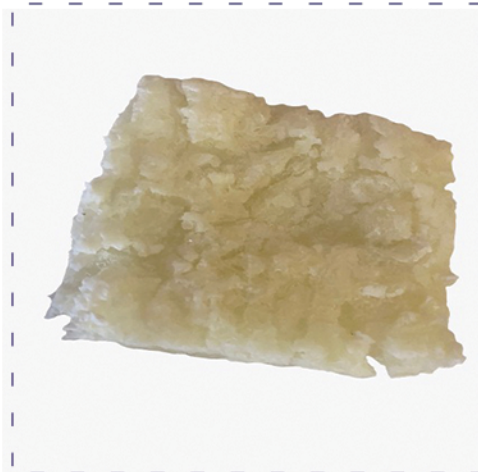

Ingredient List



Water(150ml)



Baking powder(200ml)



Corn Starch(100hththhhml)

QR CODE

Preperation Steps

Step one
Add all the ingredients to a pot

Step two
Place the pot on a hot plate or stoc and heat at very low temperature.

Step three
Stir 5-10 minutes constantly until a viscous consistency is achieved.and pour the sample into frame then, air dry or dry in oven at 150°C for 1 hour

Material Assessments

hard	<div><div></div><div></div><div></div><div></div><div></div></div>	soft	<div><div></div><div></div><div></div><div></div><div></div></div>
smooth	<div><div></div><div></div><div></div><div></div><div></div></div>	rough	<div><div></div><div></div><div></div><div></div><div></div></div>
matte	<div><div></div><div></div><div></div><div></div><div></div></div>	glossy	<div><div></div><div></div><div></div><div></div><div></div></div>
elastic	<div><div></div><div></div><div></div><div></div><div></div></div>	not elastic	<div><div></div><div></div><div></div><div></div><div></div></div>
strong	<div><div></div><div></div><div></div><div></div><div></div></div>	weak	<div><div></div><div></div><div></div><div></div><div></div></div>
opaque	<div><div></div><div></div><div></div><div></div><div></div></div>	transparent	<div><div></div><div></div><div></div><div></div><div></div></div>
tough	<div><div></div><div></div><div></div><div></div><div></div></div>	ductile	<div><div></div><div></div><div></div><div></div><div></div></div>
light	<div><div></div><div></div><div></div><div></div><div></div></div>	heavy	<div><div></div><div></div><div></div><div></div><div></div></div>
fibred	<div><div></div><div></div><div></div><div></div><div></div></div>	not-fibred	<div><div></div><div></div><div></div><div></div><div></div></div>